



1 PREPARE 2 TREAT 3 MAINTAIN

EXTERIOR DEEP CLEANER



For patinated wood

Cleans and rejuvenates patinated outdoor wood surfaces, e.g. garden furniture and patios.



Easy to apply

The ready-mixed cleaner can be easily applied with a brush, roller or spray gun.



Intensive cleaning

Penetrates deep into the wood and removes dirt, coatings and grey patina. Can be scrubbed with a stiff-bristled brush or WOCA Silicium Brush.



APPLICATION AREA

Exterior Deep Cleaner is used for intensive cleaning of outdoor wood, such as patios, fences, garden furniture, wall coverings etc. It is ready-mixed and easy to apply.

RESULT

Exterior Deep Cleaner penetrates deep into the wood and removes dirt and former coatings efficiently. It is also ideal for rejuvenating patinated wood.

Product information

Coverage: 86-108 sq. ft./L
Packaging: 0.75 L, 2.5 L and 5 L



HOW TO...

...CLEAN OUTDOOR WOOD

Tools



The Cleaner is preferably applied with a brush, roller or spraygun.

Preparation

Do not apply in direct sunlight and during hot weather. Soak the wood, using plenty of water. Use a garden hose if possible.

Please note

Exterior Deep Cleaner is ready-mixed and should not be diluted.

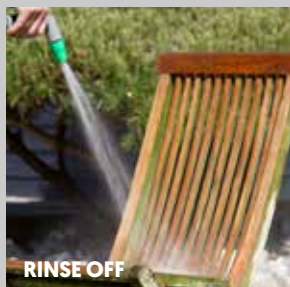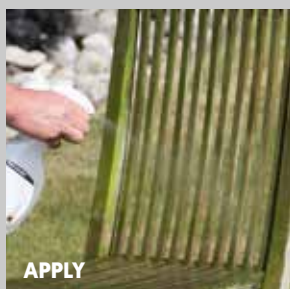

INSTRUCTIONS

- 1 Using a brush, roller or spray gun, apply Exterior Deep Cleaner as a smooth, uniform layer and allow the cleaner to work.
- 2 After approximately 20 minutes, scrub the wood using a stiff-bristled brush. We recommend that you use WOCA silicon brush for the best results.
- 3 Rinse off the Exterior Deep Cleaner with plenty of water and leave the wood to dry for at least 48 hours, before application of oil, paint or impregnation. The wood must be completely dry.

If a completely smooth surface is desired, de-nip the wood with a grit 180-240 sanding pad before further treatment.