



1 PREPARE 2 TREAT 3 MAINTAIN

# EXCELLENT FINISH



resistance

### Good resistance

Durable surface with good resistance to scratches, spills and stains. Ideal for residential applications.



24h

### Fast drying

2-3 hours of drying time between coats. Dry in 24 hours for light use / fully hardened in 7 days and ready for cleaning with water.



eco

### Indoor climate labelled

Ensures a good working environment during application. Does not harm indoor air quality. No isocyanate. Water based.



maintain

### Easy to maintain

No special tools required. Just use the standard WOCA system.

### APPLICATION AREA

Excellent Finish is for new, untreated, sanded and finished wood. Ideal for all species of wood.

The finish is perfect for residential applications as a result of good sanding characteristics and fast drying time.

### RESULT

Excellent Finish ensures a scratch-resistant and durable surface.

The finish is indoor climate approved and thus assures a good working environment during application, as well as a comfortable indoor climate afterwards.

### Product information

Coverage: 425-550 SF/ 5 L container

Packaging: 5 L

Available in Matt and Silk-matt





# HOW TO...

## ...DO THE BASIC TREATMENT OF WOODEN FLOORS

### Tools

The finish is preferably applied with a 3/8" nap roller or similar.

### Preparation

The floor must be free of dirt, grease, wax and sanding residue. Floors that have already been finished must be cleaned with WOCA Intensive Wood Cleaner before intermediate sanding. Vacuum clean thoroughly and if required, wipe down the floor with a clean, tightly-wrung cloth. Shake the container thoroughly before use.


It is important that both wood and finish are at a temperature of at least 59°F, and ideally about 68°F, and that air humidity is approx. 50 %. Make sure that the room is well-ventilated, for optimal evaporation and drying time.

### Please note

Do not expose the floor to water or clean it for the first 7 days while the finish is hardening.

### Maintenance and cleaning

For regular cleaning, we recommend using WOCA Vinyl Laminate and Finish Soap. Maintain the surface with WOCA Vinyl Laminate and Finish Care.

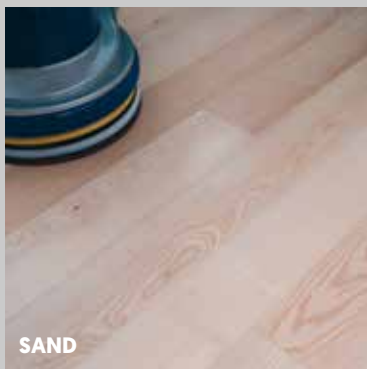

## INSTRUCTIONS

### - UNTREATED OR SANDED SURFACES

- 1 For the final sanding on clean wood, use grit 120 sandpaper.
- 2 Vacuum clean and wash the surface using a well-wrung microfibre mop. The floor must be completely dry before priming.
- 3 WOCA Base Primer and a layer of Excellent Finish should be applied undiluted, using a brush or roller.
- 4 **Intermediate sanding with grit 150-200** and vacuum clean the surface thoroughly.
- 5 Then apply another layer of undiluted Excellent Finish.

### - REFINISHING FINISHED SURFACES

- 1 Thoroughly clean the surface with WOCA Intensive Wood Cleaner.
- 2 Then sand the surface until matt, using fine sandpaper or a grit 120 sanding pad, and carefully vacuum clean the surface.
- 3 Apply two layers of undiluted finish, using a brush or roller.

The freshly-finished floor is suitable for cautious use after approx. 5 hours. Do not place furniture etc. on the floor until at least 24 hours after the final coat of finish. The floor will be ready for normal use after approx. 7 days, after which rugs etc. can be placed on the floor.