



1 PREPARE 2 TREAT 3 MAINTAIN

SUPERIOR FINISH



High resistance

Robust surface with high resistance to scratches, spills and stains. Ideal for kitchens, corridors etc.



Fast drying

2-3 hours of drying time between coats. Dry in 24 hours for light use / fully hardened in 7 days and ready for cleaning with water.



Indoor climate labelled

Ensures a good working environment during application. Does not harm indoor air quality. No isocyanate. Water based.



Easy to maintain

No special tools required. Just use the standard WOCA system.

APPLICATION AREA

Superior Finish is for new, untreated, sanded and finished wood, or as topcoat on WOCA oil. Ideal for all species of wood.

The finish is perfect for medium traffic areas, fx kitchens, corridors and entrance halls, due to high durability and easy maintenance.

RESULT

Superior Finish ensures a very hard-wearing and durable surface with high resistance to water and chemicals and excellent adhesion to previously-finished surfaces.

The finish is indoor climate approved and thus assures a good working environment during application, as well as a comfortable indoor climate afterwards.

Product information

Coverage: 425-550 SF/5 L container
Packaging: 5 L
Available in Matt and Silk-matt





HOW TO...

...DO THE BASIC TREATMENT OF WOODEN FLOORS

Tools

Use a 3/8" nap roller to apply

Instruction

Superior Finish is used for finishing of new, untreated, sanded and previously finished wooden floors, or as topcoat on WOCA oil, and is applied with a 3/8" nap roller or similar. The water-based finish ensures a robust surface with high resistance to scratches, spills and stains.

Preparation

The floor must be free of dirt, grease, wax and sanding residue. Floors that have already been finished must be cleaned with WOCA Intensive Wood Cleaner before intermediate sanding. Vacuum clean thoroughly and if required, wipe down the floor with a clean, tightly-wrung cloth. Shake the finish thoroughly before use.


It is important that both wood and finish are at a temperature of at least 59°F, and ideally about 68°F, and that air humidity is approx. 50%. Make sure that the room is well-ventilated, for optimal evaporation and drying time.

Maintenance

For regular cleaning, we recommend using WOCA Vinyl Laminate and Finish Soap. Maintain the surface with WOCA Vinyl Laminate and Finish Care.

Please note

Do not expose the floor to water or clean it for the first 7 days while the finish is hardening.

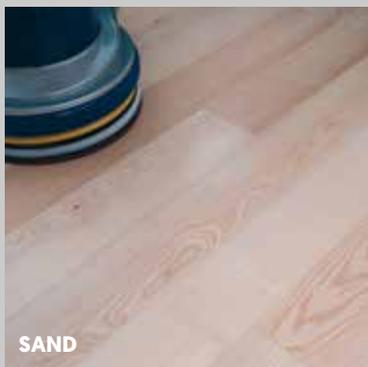

INSTRUCTIONS

- UNTREATED OR SANDED SURFACES

- 1 For the final sanding on clean wood, use grain 120 sandpaper or sanding pad.
- 2 Vacuum clean and wash the surface using a well-wrung microfibre mop. The floor must be completely dry before priming.
- 3 WOCA Base Primer and a layer of Superior Finish should be applied undiluted, using a brush or roller.
- 4 **Intermediate sanding with grain 150-200** and vacuum clean the surface thoroughly.
- 5 Then apply another layer of undiluted Superior Finish.

- REFINISHING FINISHED SURFACES

- 1 Thoroughly clean the surface with WOCA Intensive Wood Cleaner.
- 2 Then sand the surface until matt, using fine sand paper or a grain 120 sanding pad, and carefully vacuum clean the surface before finishing with Superior Finish.
- 3 Apply two layers of undiluted finish, using a brush or roller.

The freshly-finished floor is suitable for cautious use after approx. 5 hours. Do not place furniture etc. on the floor until at least 24 hours after the final coat of lacquer. The floor will be ready for normal use after approx. 7 days, after which rugs etc. can be placed on the floor.